



## Phase & Motor Rotation Meter Model 6609

Cat. #2121.11

**Operating voltages: Leads Connected 40 to 600V<sub>AC</sub> Between Phases, Unconnected 120 to 400V<sub>AC</sub> Between Phases, Frequency range 15 to 400HZ**

Verify proper phase wiring, detect open or de-energized phases and determine correct wiring for proper rotation on motors, pumps, etc.

Cat.#2121.11

<b>Phase Rotation Connection Method</b>	Direct Connection with Color-coded Leads
<b>Rotating Field Connection Method</b>	Non-Contact Static Induction
<b>Operating Voltages</b>	Leads Connected: 40 to 600V <sub>AC</sub> Between Phases; Unconnected: 120 to 400V <sub>AC</sub> Between Phases
<b>Frequency Range</b>	15 to 400Hz
<b>Phase Rotation Indicator</b>	LEDs for Left or Right Rotation
<b>Power Supply</b>	One 9V Alkaline Battery (Included)
<b>Dimensions</b>	5.1 x 2.7 x 1.3" (130 x 69 x 32mm)
<b>Weight</b>	6 oz (170g)
<b>Operating Temperature</b>	32° to 104°F (0° to 40°C)
<b>Storage Temperature</b>	-4° to 122°F (-20° to 50°C)
<b>Relative Humidity</b>	<80%
<b>Safety Compliance</b>	IEC 61010-1; 600V CAT III
<b>Ingress Protection</b>	IP 40

For more details, download the datasheet or user manual at [www.aemc.com](http://www.aemc.com)

15 Faraday Drive • Dover, NH 03820 USA • (800) 343-1391 • (603) 749-6434 • [www.aemc.com](http://www.aemc.com)

[customerservice@aemc.com](mailto:customerservice@aemc.com) • [techsupport@aemc.com](mailto:techsupport@aemc.com)

CE Approved

Yes

For more details, download the datasheet or user manual at [www.aemc.com](http://www.aemc.com)

15 Faraday Drive • Dover, NH 03820 USA • (800) 343-1391 • (603) 749-6434 • [www.aemc.com](http://www.aemc.com)  
[customerservice@aemc.com](mailto:customerservice@aemc.com) • [techsupport@aemc.com](mailto:techsupport@aemc.com)