

## DataView<sup>®</sup> Software Supports the Following Instruments:

---

### DATA LOGGERS

- Model L452
- Simple Logger II Series

### ENVIRONMENTAL TESTERS

- Model 10101
- Model 10141
- Model 1110
- Model 1227
- Model 1246
- Model 1821
- Model 1822
- Model 1823
- Model 1510

### INSTALLATION TESTERS

- Model 6116
- Model 6116N
- Model 6117

### GROUND TESTERS

- Model 6417
- Model 6470-B
- Model 6471
- Model 6472

### MEGOHMMETERS

- Model 1060
- Model 5060
- Model 5070
- Model 6526
- Model 6532
- Model 6534
- Model 6550
- Model 6555

### MICRO-OHMMETERS

- Model 6240
- Model 6250
- Model 6255
- Model 6292

### POWER METER & LOGGERS

- Model PEL 102
- Model PEL 103
- Model PEL 105
- Model 3945-B
- Model 8220
- Model 8230
- Model 8333
- Model 8335
- Model 8336
- Model 8435
- Model 8436

### POWER CLAMP-ON METERS

- Model 407
- Model 607

### RATIOMETERS

- Model DTR 8510

**NOTE:**

**PQL Loggers and Sentinel Series  
are not supported in Dataview  
versions above 3.09.0008**