DATA LOGGERS

Simple Logger[®] II 4-Channel *Bluetooth* Edition


Model L564

Four channel logger with two AC voltage and two AC current inputs that directly measure and record up to 600V

► SPECIFICATIONS

| MODEL | L564 | | | | | |
|-------------------------|--|---|--|--|--|--|
| ELECTRICAL | | | | | | |
| Channels | Four (two voltage & two current) | | | | | |
| Connection | Current Channel | Voltage Channel | | | | |
| Input Connection | Two 3 pin connector | Three recessed 4mm banana jacks | | | | |
| Input Range | 0 to 1Vac (for use with iron core current probes with a voltage output) | 0 to 600Vac | | | | |
| Accuracy (50/60Hz) | 0 to 10mV unspecified 10 to 50mV: ±(0.5% of Reading + 1mV) 50 to 1000mV: ±(0.5% of Reading + 0.5mV) | 0 to 5V unspecified 5 to 50V: \pm (0.5% of Reading + 1V) 50 to 600V: \pm (0.5% of Reading + 0.5V) | | | | |
| Input Impedance | 100kΩ | 16MΩ | | | | |
| Sample Rate | 64 samp | les/cycle | | | | |
| Storage Rate | Programmable from | 125ms to 1 per day | | | | |
| Storage Modes | Start/Stop, FIFO, Extended Recording Mode (XRM™) and Store on Alarm | | | | | |
| Recording Length | 15 minutes to 8 weeks, prog | grammable using DataView® | | | | |
| Memory | 1,000,000 measurements (2MB). The recorded data is stored in non-volatile memory and will be retained even if the battery is low or removed. | | | | | |
| Communication | Bluetooth connection (communicates up to 30 ft) | | | | | |
| Power Source | 4 x 1.5V C-cell Alkaline batteries (included) | | | | | |
| Battery Life | Up to 180 days (dependent on storage rate/recording length) | | | | | |
| MECHANICAL | | | | | | |
| Dimensions | 5.904 x 5.904 x 3.568" (150 x 150 x 91mm) | | | | | |
| Weight (with battery) | | | | | | |
| Case | UL94-V0 | | | | | |
| Vibration | IEC 68-2-6 (1.5r | nm, 10 to 55Hz) | | | | |
| Shock | IEC 68-2- | -27 (30G) | | | | |
| Drop | IEC 68-2 | -32 (1m) | | | | |



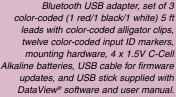

Simple Logger® II Model L564 (4-Channel, TRMS, Bluetooth, Voltage & Current, DataView® software)





FEATURES

- Four input channels (2 voltage & 2 current)
- User programmable recording modes: Start/Stop, FIFO, Extended Recording Mode (XRM[™]) and Alarm Recording
- Powered by standard Alkaline batteries for a period of up to 180 days
- Stores 1,000,000 measurements
- Includes FREE DataView[®] software for data storage, real-time display, analysis and report generation
- Includes set of 3 color-coded (1 red/1 black/1 white) 5 ft leads with color-coded alligator clips
- Wireless *Bluetooth* data communication (Class 2 *Bluetooth* module included)
- Safety Ratings 600V CAT IV; 1000V CAT III

► APPLICATIONS

- Single/split phase and 2 phase load monitoring
- Neutral and ground voltage/current, current monitoring
- Intermittent problem detection
- Harmonic voltage and current monitoring using DataView® software
- Residential power monitoring
- Fault voltage detection
- Load profiling

CATALOG NO.

2126.36

DATAVIEW[®]

Software for Data Loggers




Typical DataView[®] Functional Displays

| Recording setu Rorage rate: | 125 mSecs | • P | Nict | 1 | • | Memory Total 540672 bytes |
|---|-----------|------|---------------------------------------|------------|----------|---------------------------------|
| laft delet | 7/ 7/2008 | 1000 | art time: | 3:21:09 PM | | Available 513388 bytes |
| nd dale: | 9/ 7/2009 | * Er | nd time: | 3.36.09 PM | 소 | Required 519298 bytes |
| Record Now | | | Reset Date/Time | | | Erape |
| Storage Mode C Star/Stop C FIFO P XFIM | | 10 | Starting Mode Romal Synchronous | | Set Dock | |
| XBM | | | | | | |
| Measurement o | | | | P Record | 10 | |
| Mossurement o Channel Fu | notion | | | P Record | | |

Quick and simple configuration of all functions and settings from one dialog box.

| Alemente Dannel Function | Disabled Above upper in Within upper a Outside upper Upper limit Lower limit | at nd lower levits | | |
|-----------------------------|---|-----------------------|------|---|
| Download | Bead | Sere | Load | a |

Configure all alarm functions with straightforward selections.

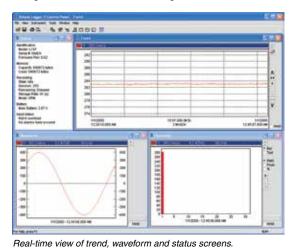

DIAYS Configure all data logger functions of the Simple Logger® II Models

- · Display and analyze real-time data on your PC
- Configure all data logger functions and parameters from your PC including sample rate, recording length, channel configuration and more
- Create and store a complete library of configurations that can be uploaded to the logger as needed
- Zoom in and out and pan through sections of the graph to analyze the data
- Download, display and analyze recorded data
- Display waveforms, trend graphs, harmonics (AC models) and text summaries
- Create custom views and reports
- Print reports using standard or custom templates you design
- Free software upgrades are available on our website **www.aemc.com**

