

(800) 945-2362 (Ext. 360) • (603) 749-6434 • Fax: (603) 742-2346 • www.aemc.com

## **BATTERY PACK REPLACEMENT - MODELS 6250 & 6255 (Cat. #2960.43)**





- 1. Using a Phillips screwdriver remove the (4) screws from the bottom of the yellow case.
- 2. Flip the case to top-side-up and **carefully** slide the complete meter out of the case.
- 3. Unplug the BLACK and RED wires from the battery pack, then disconnect the (2) YELLOW wires.
- 4. Untighten the (4) screws with plastic spacers located at the bottom of the aluminum plate and **slowly** move plate out of the main board.
- 5. Remove the (2) screws that are holding the battery pack in place.
- 6. Replace the old battery pack with the new battery pack.
- 7. Add the (2) plastic spacers on to the top of the new battery pack, insert the screws into the aluminum plate and tighten very well. *The battery pack cannot be allowed to move from the plate.*
- 8. Reconnect the wires to the board (see below images).
- 9. Discard the old battery pack properly (recycle).







