


POWERPAD III - HOW TO ATTACH A PHOTOGRAPH(S) TO A RECORDING IN A SINGULAR DATAVIEW® REPORT

Scenario: User is in the middle of a Trend recording with a PowerPad III instrument (8333, 8336 or 8435). The user takes a **photo** or screenshot of the phasor diagram (or any other screen) with the front panel button during a recording. The User wants this photo (or photos) to be attached and included in the downloaded Trend recording report.


Follow the steps below to achieve the above results.

1. Connect the PowerPad III to your computer via USB cable.
2. Open PowerPad III Control Panel and connect to your instrument.
3. Follow lettered steps below:

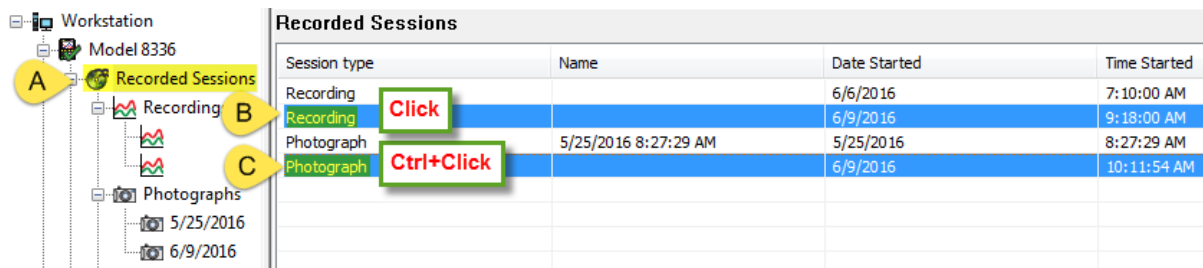


- A) Click on **Recorded Sessions**.
- B) Click on **Recording** of the Trend recording that you want to download.
- C) Ctrl+Click on **Photograph** of the photograph (or photographs) to include in the report.
- D) Repeat Ctrl+Click to select more **Photographs** that you wish to include.

4. Click on the icon **Download recorded data**.

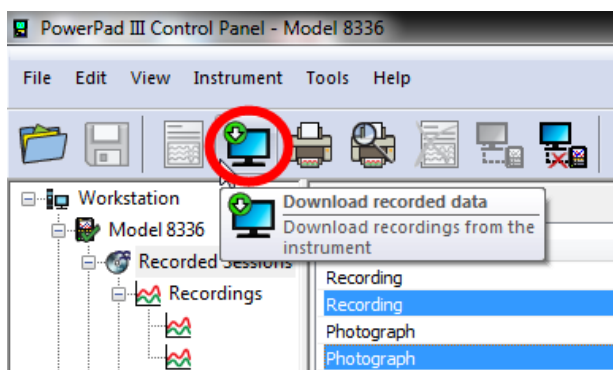


5. A Download window will open with a progress bar indicating the percentage of download and estimated time to complete.


6. Once completed, the Trend recording with photograph(s) will appear under **My Campaigns**.

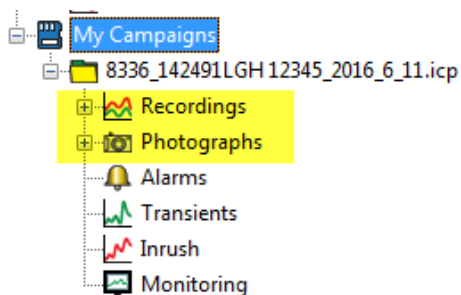

7. Click on the Campaign name (begins with 8336_xxxx....) and then click on **Create DataView report** icon.

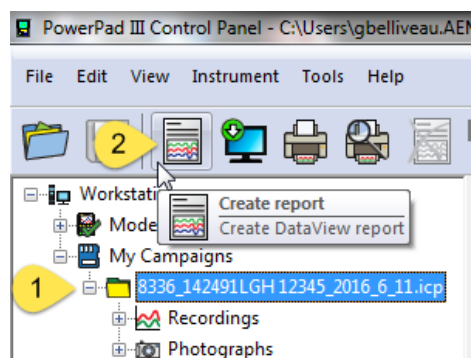

8. Trend recording and photograph(s) will now open in DataView as part of a singular report.

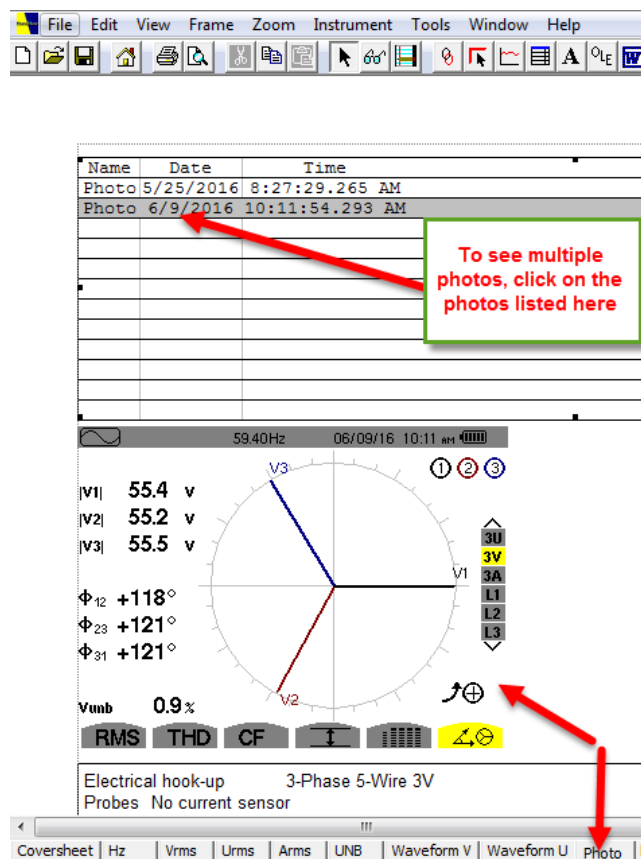

If you have any questions, contact AEMC® Technical Support at 1-800-343-1391 x351 or email techsupport@aemc.com.

Please visit and subscribe to our YouTube™ channel for informative videos on our products and software.

www.youtube.com/user/AEMCinstruments

