# AC Current Probe Model MD304

# User Manual

# DESCRIPTION

The **Model MD304** (Catalog #1201.37) is designed for use in industrial environments. The hook-shaped jaws enable the user to "pry" into or "hook" onto cables (will accept 2 x 500 MCM) or even smaller bus bars. The current output up to 500 Arms continuous makes it the perfect tool for measurement with DMMs, recorders or instruments with current ranges. The **Model MD304** offers a 5 ft lead with safety 4 mm banana plugs.

# WARNING

These safety warnings are provided to ensure the safety of personnel and proper operation of the instrument.

- Read the instruction manual completely and follow all the safety information before attempting to use or service this instrument.
- Use caution on any circuit; high voltages and currents may be present and may pose a shock hazard.
- Read the Safety Specifications section prior to using the current probe. Never exceed the maximum voltage ratings given.
- Safety is the respondibility of the operator.
- ALWAYS connect the current probe to the display device before clamping the probe onto the sample being tested.
- ALWAYS inspect the instrument, probe, probe cable, and output terminals prior to use. Replace any defective parts immediately.
- NEVER use the current probe on electrical conductors rated above 600 V in overvoltage category III (CAT III). Use extreme caution when clamping around bare conductors or bus bars.

# INTERNATIONAL ELECTRICAL SYMBOLS



This symbol signifies that the current probe is protected by double or reinforced insulation. Use only factory-specified replacement parts when servicing the instrument.



This symbol signifies **CAUTION!** and requests that the user refer to the user manual before using the instrument.



This symbol signifies that this is a type A current sensor and that application near and removal from **HAZARDOUS LIVE** conductors is permitted.

# **DEFINITION OF MEASUREMENT CATEGORIES (CAT)**


- **CAT IV:** For measurements performed at the primary electrical supply (< 1000 V), such as primary overcurrent protection devices, ripple control units, or meters.
- **CAT III:** For measurements performed in the building installation at the distribution level, such as hardwired equipment in fixed installation or circuit breakers.
- **CAT II:** For measurements performed on circuits directly connected to the electrical distribution system, such as measurements on household appliances or portable tools.

# **RECEIVING YOUR SHIPMENT**

Upon receiving your shipment, make sure that the contents are consistent with the packing list. Notify your distributor of any missing items. If the equipment appears to be damaged, file a claim immediately with the carrier, and notify your distributor with a detailed description of any damage immediately.



## **CURRENT PROBE - MD304 DRAWING**

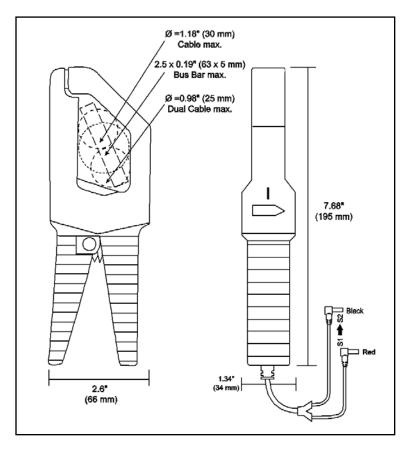

# **ELECTRICAL SPECIFICATIONS**

# Current Range:

(1 to 600) A<sub>A</sub>c

**Transformation Ratio:** 100:1

#### Output Signal: 10 mA AC/A<sub>AC</sub>

# Overload:

700 A for 10 min

### Accuracy\*:

Primary Current	25 A	100 A	250 A; 500 A	600 A
Accuracy %	5 %	2.5 %	2 %	3 %
Phase Shift	6 °	5°	3 °	3 °

600 A for 20 min max

(\*Referenced conditions: 23 °C  $\pm$  5 °K, (20 to 75) % RH, external magnetic field < 40 A/m, no DC component, no external current carrying conductor, test sample centered.) 0.1  $\Omega$  load.

#### Frequency Range:

(40 to 1000) Hz (error: add 1 % to ref.)

#### Load Impedence:

 $0.1 \ \Omega$  max non-inductive

Working Voltage: 600 V rms

Common Mode Voltage: 30 V rms

Influence of Adjacent Parallel Conductor: < 30 m A/A at 50 Hz

#### Influence of Conductor in Jaw Opening:

< 1 %

MECHANICAL SPECIFICATIONS Operating Temperature: (-5 to 122) °F (-15 to 50) °C Storage Temperature: (-40 to 185) °F (-40 to 85) °C	<b>Weight:</b> 14.82 oz (420 g) <b>Colors:</b>	
	Dark gray handles Output: Insulated 5 ft (1.5 m) lead with safety 4 mm banana plugs SAFETY SPECIFICATIONS C C D D D Electrical: Double insulation or reinforced insulation be- tween the primary or secondary and the outer case of the handle per IEC 1010-2-032. - 600 V CAT III, Pollution: 2	
Influence of Temperature: < 0.1 % per 10 °K Altitude: Operating: (0 to 2000) m Non-operating: (0 to 12,000) m Jaw Opening: 1.3 in (33 mm) Maximum Conductor Size: 1.18 in (30 mm)		
Maximum Bus Bar Size: (2.48 x 0.20) in (63 x 5) mm	- 300 V CAT IV, Pollution: 2	
Envelope Protection: IP 20 (IEC 529) Drop Test: 1.5 m (IEC 68-2-32)	Electromagnetic Compatibility: EN 50081-1 Class B EN 50081-2 Electrostatic discharge IEC 1000-4-2 Radiated field IEC 1000-4-3 Fast transients IEC 1000-4-4 Magnetic field at 50/60 Hz IEC 1000-4-8 ORDERING INFORMATION	
Mechanical Shock: 100 g (IEC 68-2-27) Vibration: 10/55/10 Hz, 0.15 mm		
(IEC 68-2-6) <b>Polycarbonate Material:</b> Handles: 10 % fiberglass charged polycarbonate UL 94 V0	Current Probe MD304Cat #1201.37	
Dimensions: (2.6 x 7.68 x 1.34) in (66 x 195 x 34) mm	Banana plug adapter (to nonrecessed plug) <b>Cat #1017.45</b>	

#### OPERATION

Please make sure that you have already read and fully understand the WARNING section on page 1.

#### Making Measurements with the AC Current Probe Model MD304

- Connect the black and red terminals to the Ampere AC range of your DMM or current measuring instrument. Select the appropriate current range (10 AAC range). Clamp the probe around the conductor to be tested with the arrow pointed toward the load. Read the value display on the DMM and multiply it by the probe ratio (100/1). (If reading = 4.59 A, the current flowing through the probe is 4.59 A x 100 = 459 AAC)
- For best accuracy, avoid if possible, the proximity of other conductors which may create noise.

#### **Tips For Making Precise Measurements**

- When using a current probe with a meter, it is important to select the range that provides the best resolution. Failure to do this may result in measurement errors.
- Make sure that probe jaw mating surfaces are free of dust and contamination. Contaminants cause air gaps between the jaws, increasing the phase shift between primary and secondary. It is very critical for power measurement.

# MAINTENANCE

### Warning

- For maintenance, use only original replacement parts.
- To avoid electrical shock, do not attempt to perform any service on the device unless you are qualified to do so.
- To avoid electrical shock and/or damage to the instrument, do not allow water or other foreign agents to come into contact with the probe.

### **Cleaning**

i

To ensure optimum performance, it is important to keep the probe jaw mating surfaces clean at all times. Failure to do so may result in error in readings. To clean the probe jaws, use very fine sand paper (fine 600) to avoid scratching the jaw, and then gently clean with a soft, oiled cloth.

# **REPAIR AND CALIBRATION**

You must contact our Service Center for a Customer Service Authorization number (CSA#). This will ensure that, when your instrument arrives, it will be tracked and processed promptly. Please write the CSA# on the outside of the shipping container.

 
 Ship To:
 Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments 15 Faraday Drive Dover, NH 03820 USA

 Phone:
 (800) 945-2362 (Ext. 360) (603) 749-6434 (Ext. 360)

 Fax:
 (603) 742-2346

 E-mail:
 repair@aemc.com

(Or contact your authorized distributor)

### NOTE: You must obtain a CSA# before returning any instrument.

### **TECHNICAL AND SALES ASSISTANCE**

If you are experiencing any technical problems, or require any assistance with the proper operation or application of your instrument, please call, e-mail or fax our technical support team:

 Contact:
 Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments

 Phone:
 (800) 945-2362 (Ext. 351) or (603) 749-6434 (Ext. 351)

 Fax:
 (603) 742-2346
 E-mail: techsupport@aemc.com

#### LIMITED WARRANTY

The current probe is warrantied to the owner for a period of two years from the date of original purchase against defects in manufacture. This limited warranty is given by AEMC<sup>®</sup> Instruments, not by the distributor from whom it was purchased. This warranty is void if the unit has been tampered with, abused, or if the defect is related to service not performed by AEMC<sup>®</sup> Instruments.

Full warranty coverage and product registration is available on our website at: <u>www.aemc.com/warranty.html</u>.

Please print the online Warranty Coverage Information for your records.